How to Bypass Teddy Ruxpin Gen2 and 3 Copy Protection

Teddy Ruxpin of this era has a switch that would disable Teddy's animations if a genuine Teddy Ruxpin tape was not detected. The switch below detects the extra notches on the top edge of Teddy Ruxpin Cassettes. You can notch your own cassettes or you can bypass the switch, as I did.

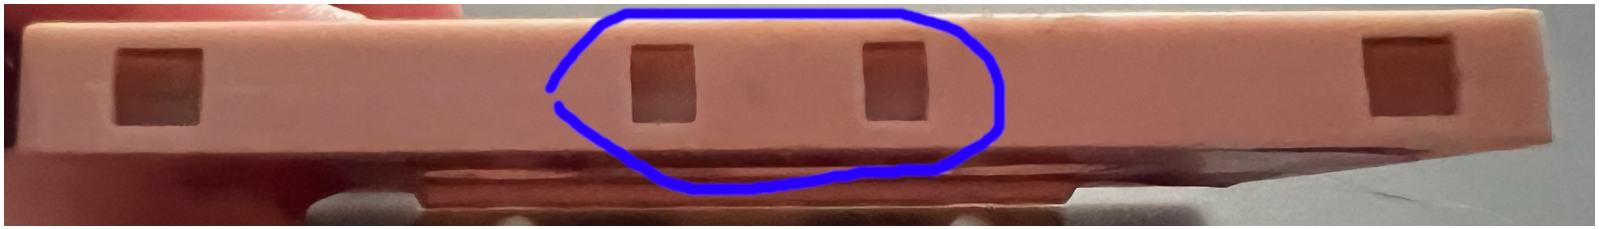

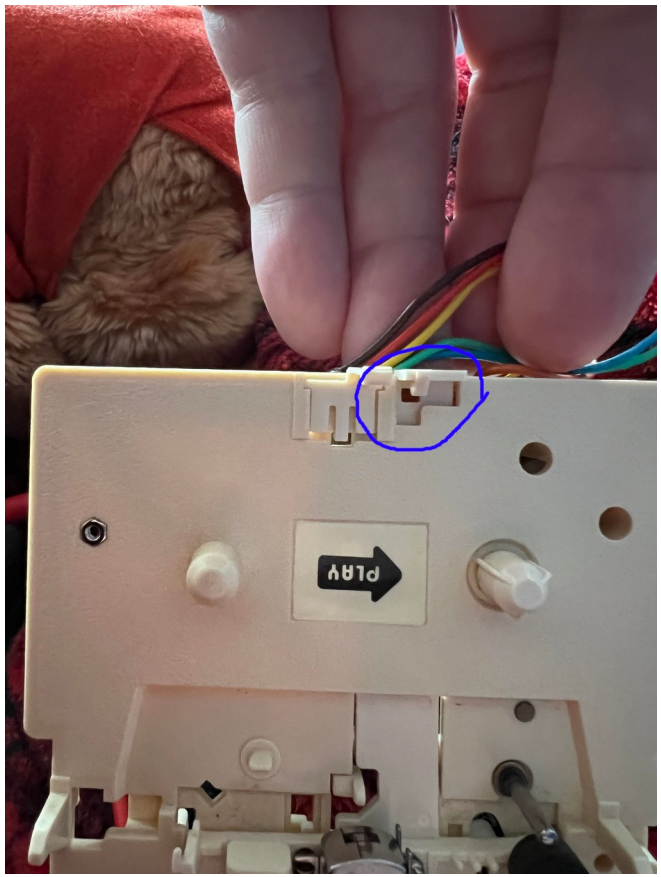

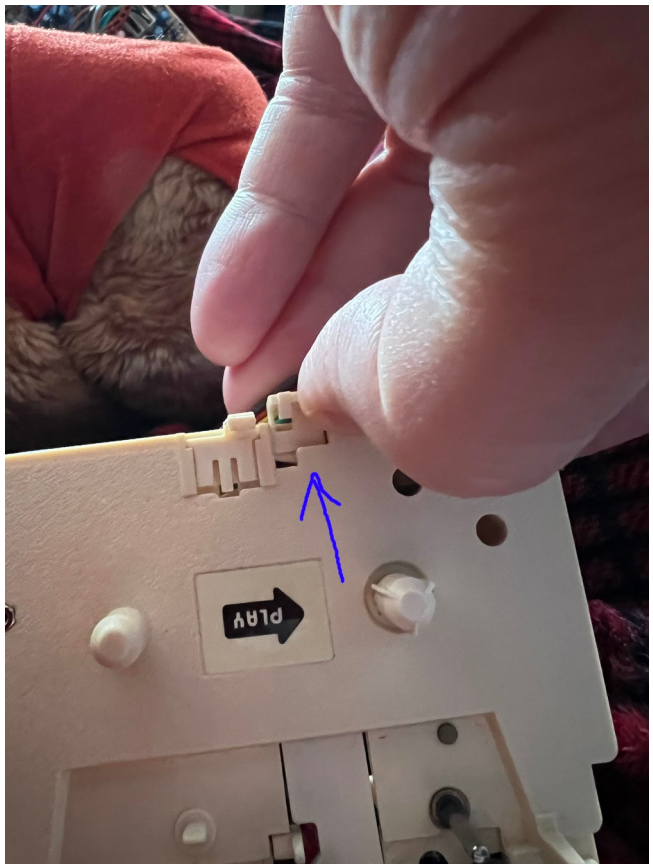

Grizzly Adam 2024 – Teddy Ruxpin
https://discord.com/invite/PrfX9CDY

Below are pictures of the contact switch in Gen2 and Gen3 Teddys. The only difference I saw was the wire color.

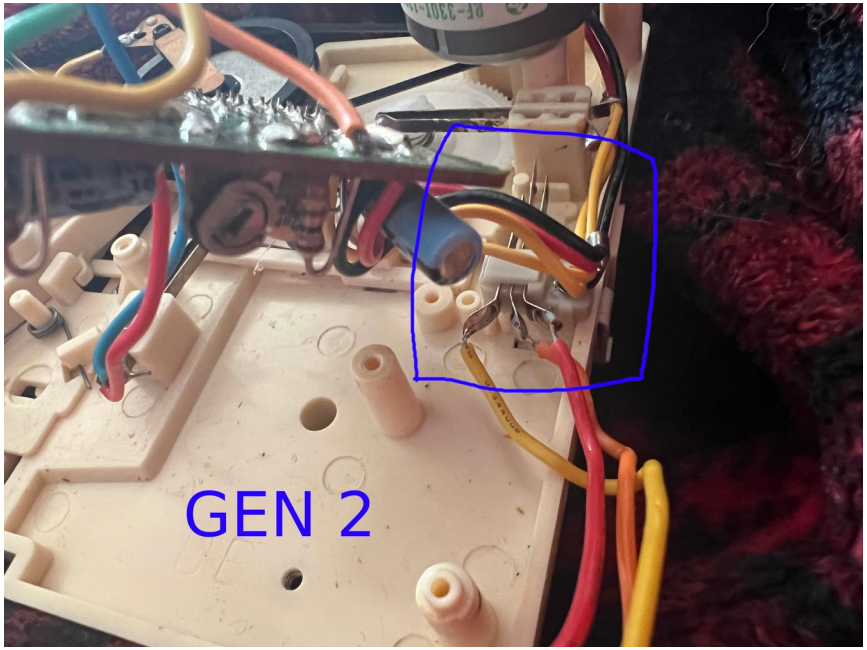

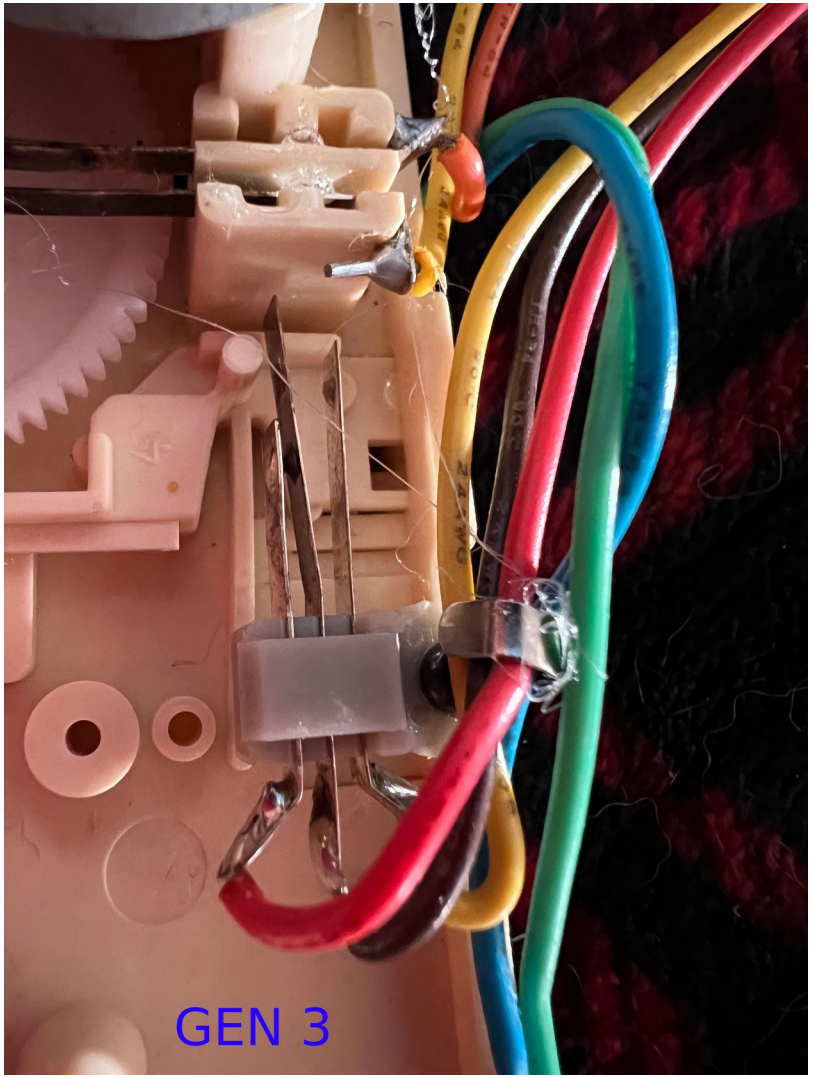

Here is the Gen2 switch bypassed. Gen3 uses the same method, only the wire colors are different. Simply move the center wire to the leftmost terminal and the contact switch will always enable the animations!